



Instruction Manual



Hand Blender
8433325500238

TECHNICAL DATA


220-240V~50/60Hz, 800W

The hand blender is designed to be small and exquisite, and of a durable quality. No matter what you want to make-soup, mayonnaise, baby food and so on, using these machines can make things very easy and fast. The machine is very easy to clean. It can provide your daily life with a lot of comforts and convenience.

BEFORE CONNECTING TO POWER

- * Before connecting to the power, please check whether the type of supply and the mains voltage match with the details given on the rating label on the appliance.
- * Using for the first time
- * Rip off all wrapping paper and plastic bags. Clean the fittings. (Refer to Cleaning Method)

KNOWING YOUR HAND BLENDER

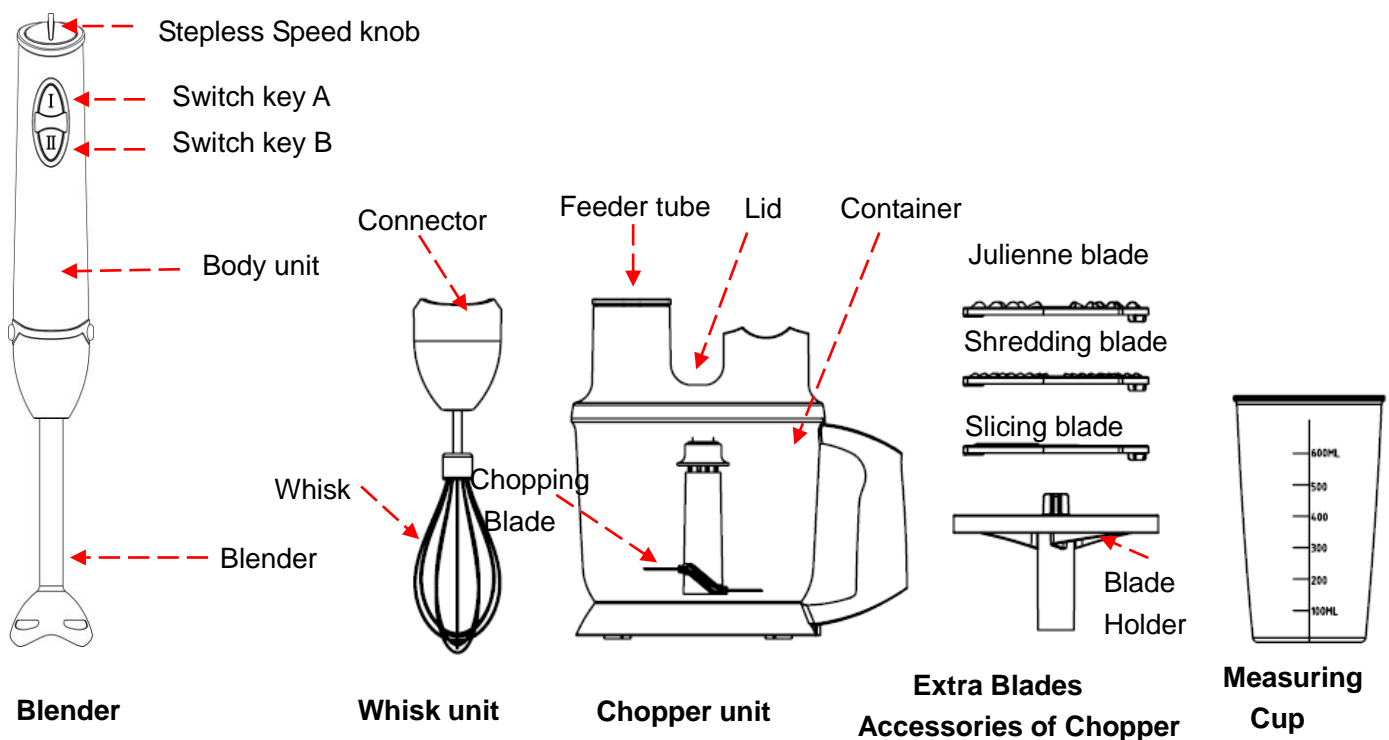

SAFETY GUIDANCE

- * Special cares need to be paid when preparing food for a baby, an elderly or a patient. Before using the machine, you should be sure that the accessories have been completely sterilized and the sterilization has been under the disinfectant maker's instructions.
- * Do not touch the blending / chopping blade when connecting to power.
- * Keep your fingers, hair, clothes and other objects a distance from the machine when it is still rotating.
- * Pull the plug off when changing fittings or after use.
- * Do not mix hot oil or other oily ingredient.
- * Avoid children or other people who do not know the operation of this machine to use it, unless they are under proper instruction. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- * Do not dip the handle into water or damp the cable, in case you will get an electronic shock.. Children should be supervised to ensure that they do not play with the appliance.

- * Do not put the cable on a hot surface or hang it from the kitchen table. Your children can be hurt when they are trying to drag the cable and turn down the machine.
- * If the supply cord is damaged, it must be replaced by the manufacture of its service agent or a similar qualified person in order to avoid a hazard.
- * Do not continuously operate the machine, the motor will overheat. Or turn off the switch every 1 minute, and let the motor cool down at least 1 minute. The motion could not be more than 3 cycles. More motion should be done after the motor cool down. If not, the motor may be damaged.
- * Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- * Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- * Using the machine, do not operate the blender without dip into the food. Do not operate the machine over 20 seconds when the blender is unloaded. Avoid damage to the motor from overheat.
- * This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- * Keep the appliance and its cord out of reach of children less than 8 years.
- * If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- * Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
- * Do not allow children to use the blender without supervision.

SWITCH KEY

The **switch A** button key is for low speed, the **switch B** button key is for Turbo speed.

- * Press any switch key, the machine will work. Loosen the switch key, the machine will stop.

STEPLESS SPEED KNOB

Press down **switch A** button key, turn on the variable speed knob to fast or slow the speed.

If you want the blender move slowly, turn the adjustment for a little.

If you need the blender move fast, turn the adjustment for more.

The **switch B** button key is always in Turbo speed, no matter you turn the variable speed knob or not.

USING THE BLENDING

- * The blender is used for mince or mix the food.
- * Move the hot pan away from fire and wait until its temperature drops down to be below 70°C. To avoid the housing overheating.
- * Set the blender on the housing, screw tightly and lock it.
- * Connect to power. To avoid spattering, put the blender into ingredients before switching on the power.
- * Hold the mixing cup tightly and push down the switch key. The liquid ingredients you are mixing cannot

submerge the juncture of the blender.

* Move the blender downwardly and upwardly.

* After use, please pull out the plug and disassembly the fitting.

* Put 200g Carrot or similar food into 300 ml water. Run the machine no more than 10 seconds and rest the machine 1 minute for further operation.

* Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.

* Do not allow children to use the blender without supervision.

USING THE WHISK

Whisk can be used to beat small amount of food, such as egg white, cream, instant desert, beaten eggs, sponge cake etc.

Do not try beat too stiff or solid ingredients such as butter or sugar. The whisk can be damaged.

1. Set the whisk into the connector.
2. Fix the whisk Unit into the Body unit. Screw tightly and lock it.
3. Connect to power. To avoid spattering, please put the whisk into ingredients before switching on the power.

Hold the mixing cup tightly and push down the switch key. The liquid ingredients you are mixing cannot submerge the juncture of the whisk. Don't put more than 500 ml of water when mixing in the mixing cup.

4. After use, pull out the plug and disassembly the fittings.
5. Not allowed to continuously use the whisk more than 2 minutes.

USING THE CHOPPER

The chopper can be use on meat, cheese, vegetable, vanilla, bread, biscuit, nutlet etc... Do not use it on ingredients that are extremely hard, such as coffee bean, ice cube, spice or chocolate. They may damage the cutter.

1. Take bones out of meat and cut it into small pieces of 1-2cm size. In most, it can put 350g meat into it at a time.
2. Set the chopping blade on the middle bar of the container
3. Put ingredients in.
4. Cover the lid. Screw tightly and lock it.
5. Fix the Body unit into the chopper unit. Lock it.
6. Connect to power. Hold tightly of the container and then push down the switch key.
7. After use, pull off the plug and disassemble the fittings.
8. Not allowed to continuously use more than 15 seconds, should cool down at least 2 minutes. The motion could not be more than 3 cycles.

USING EXTRA BLADE ACCESSORIES OF CHOPPER

Use the Slicing blade for cheese, carrots, potatoes, cabbage, cucumber, courgette, beetroot and onions.

Use the **Julienne blade** for firm ingredients for salads, garnishes, casseroles and stir fries

Use the **Shred blade** for cheese, carrots, potatoes and foods of a similar texture.

CLEANING METHOD

- * Before cleaning, please switch off power and pull out the plug.
- * Do not touch the sharp chopping blade.
- * Some ingredients, such as sugar cane, can leave pigments on the plastic surface of the container. You can use a rag dipped with rap oil to wipe them out.

Body unit, Chopper lid, Whisk connector

Wiping with wet rag first and then with dry rag.

Don't dip them into water or clean them with caustic cleaning agent.

Blender, Chopper blade, Chopper container, Measuring cup, Extra Blades Accessories of Chopper

* Put half glass of water into the Measuring cup, put a little cleaning agent and dip then into the water, then start the Body unit.

* Repeat the washing without cleaning agent for 2 times

*.Pull off the plug and wipe it dry.

NOISE

We hereby declared that our product have a working noise level more than 80dB(A) but less than 85dB(A).

We suggest wearing ear protection while operating the appliance.



Warranty: 2 Years

WEEE



This product contains recyclable materials.

Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.