



Professional Hair Dryer



CODE 8433325200114

GENERAL SAFETY ADVICE

READ THE OPERATING INSTRUCTIONS CAREFULLY BEFORE FIRST USE OF THE APPLIANCE.

Read the following instructions carefully, since they give you useful safety information about installation.

Use and maintenance and help you avoid mishaps and possible accidents.

Remove the packing and make sure that the appliance is intact, with special attention to the supply cable. The elements of the packing (plastic bags, polystyrene, etc) do not have to be accessible to the children, in order to preserve them from danger sources.

It is recommended not to throw these packing material in the domestic waste, but to deliver them to the appropriate station of collection or destruction refusals, asking eventually information to the manager of the Sanitation Department of your own municipality.

Before connection the appliance make sure that the mains voltage corresponds to the data specified on the label.

If the plug does not suit the socket, let it be replaced with another suitable plug by qualified personnel only ,which shall also ensure that the section of the socket cables is suitable for your appliance power absorption.

Never pull the supply cord to unplug the appliance.

Make sure that the supply cord never comes into contact with hot or cutting surfaces

Do not use this appliance if the supply cord is damaged. In case of damage, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Only connect this appliance on alternating current

Generally, the use adaptors multiple plugs and/or extensions is not recommended; should they be necessary ,please use only simple or multiple adaptors and extensions in compliance with the safety rules in force, making sure that the capacity absorption limit marked on the simple adaptors and the extensions and the maximum power limit marked on the multiple adaptors are not exceeded.

This appliance is to be destined to its special purpose only.

Any other use is to be considered as improper and thus dangerous. The manufacturer cannot be responsible for any damages deriving from improper, wrong or incautious use.

To avoid any heating risk, it is recommended to unroll completely the supply cord and to unplug the appliance, when not used.

Before cleaning ,always unplug the appliance.

To protect against electric shock ,do not immerse cord, plug or any parts of the appliance into water or other fluids.

Do not hold the appliance with wet hands or feet.

Do not hold the appliance with naked feet.

Do not expose the appliance to atmospheric agents such as rain, wind, snow, hail.

Do not use the appliance near explosives,highly flammable materials, gases, burning flames, heaters. Do not allow children, disabled people or every people without experience or technical ability to use the appliance if they are not properly watched over.

Close supervision is necessary when any appliance used by or near children.

Make sure that children do not play with this appliance.

If your decide not to use the appliance any longer, make it unserviceable by simply cutting the supply cable after disconnecting the plug from the socket. Also make any dangerous parts unserviceable especially for children who could play with the appliance.

DRYING

1. Put the plug in the wall socket.
2. Switch the appliance on by selecting the desired setting.

The airflow and temperature can be adjusted:

Speed setting	Heat setting
2: high speed	III: high heat
1: low speed	II: medium heat

0: Off.

I: low heat

- (1) Use setting “2” and setting “III” for fast drying or pre-drying.
- (2) Use setting “1” and setting “II” or “I” for gentle drying and styling.
- (3) After drying hair, can use the cool button to set style with a continuous flow of cool air.
- 3. Dry your hair by making brushing movements while holding the dryer at a small distance from your hair.

ACCESSORY

Diffuser

CLEANNING AND MAINTENANCE

- Unplug the unit .
- Clean the unit using a soft, damp cloth.
- Never rinse the appliance with water.

TECHNICAL FEATURES

Power: 1800W

Power supply: 220-240V~50Hz

For any improvement reasons ,we reserves the right to modify or improve the product without any notice.

WARRANTY: 2 Years